## SIEMENS SEBP4V3 Installation Instructions for Service Entrance Barrier Kit for

JG or LG Main Breaker in P4 or P5 Panelboards





## This instruction sheet is to support the field installation of a Service Entrance Barrier Kit in a Siemens P4 or P5 Panelboard. Kit SEBP4V3 is for a Horizontally-mounted JG or LG Main Breaker in a P4 or P5 Panelboard. This covers both single and three phase panels, either top or bottom fed units.

- 1. Lock off ALL power supplying this equipment before working on it.
- 2. Remove the panelboard front cover and deadfront.
- 3. Identify the Service Terminal End of the Service Main this will be added to.
- 4. Place the base of the Barrier Support Bracket (Item 1) on the Breaker Support Bracket, aligning the pair of Barrier Support Bracket base holes to the outer holes on the Breaker Support Bracket.
- 5. Drive the #8-32 screws (Item 2) through the properly aligned holes of the Barrier Support Bracket (Item 1) and into the Breaker Support Bracket. Tighten both screws (Item 2) to 20 lb-in.
- 6. Next position the Barrier Assembly (Item 3) onto the Barrier Support Bracket (Item 1) such that the pair of holes on the barrier top align with the hole on each end of the Barrier Support Bracket. (NOTE: Barrier should cover previously exposed lugs on the Service Terminal End of the breaker.)
- 7. Insert the Removable Rivet (Item 4) through the properly aligned holes of the barrier and into the Barrier Support Bracket holes. Press the top of the rivet into the rivet base. Check to ensure the barrier is securely assembled to the brackets.
- 8. Before energizing the panel, ensure that ALL connections have been properly torqued, that the barrier is in place and secure, that the deadfront covers are installed and that all fillers are in place.

THIS KIT CONTAINS THE FOLLOWING ITEMS:		
ITEM	DESCRIPTION	QTY
1	Barrier Support Bracket	1
2	#8-32 x 5/8" IHWHSW Screw	2
3	Barrier Assembly	1
4	Removable Rivet; Screw Type	2

DANGER

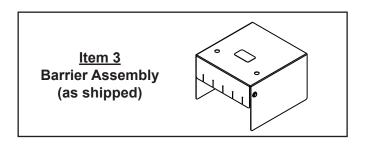

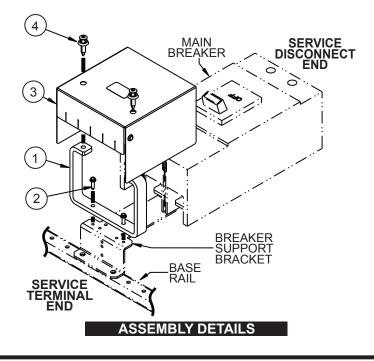

These instructions do not purport to cover all details or variations in equipment, or to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise, which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the local Siemens sales office. The contents of this Instruction manual shall not become part of or modify any prior or existing agreement, commitment or relationship. The sales contract contains the entire obligation of Siemens. The warranty contained in the contract between the parties is the sole warranty of Siemens. Any statements contained herein do not create new warranties or modify the existing warranty.

Trademarks-Unless otherwise noted, all names identified by ® are registered trademarks of Siemens AG or Siemens Industry, Inc. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.